


Mistral CCT Mirror

INSTRUCTION MANUAL

Safety Warnings

- This product is only suitable for connection to a 240V~50Hz supply in accordance with current IEE wiring regulations. It should be installed in accordance with local building regulations and is for domestic ceiling use only.
- Before installing your mirror always switch off the mains supply and remove the appropriate fuse or switch off the appropriate circuit breaker before commencing installation.
- This is a Class I product, and **must** be Earthed. The terminal blocks are supplied according to requirements of the fitting.
- This product contains non-replaceable LEDs. If the LEDs stop working then the fitting must be replaced.
- This product contains delicate parts – be careful during handling and maintenance to avoid breakage.
- This fitting is heavy, and installation will be easier with the help of an assistant.
- This product has special protection against the ingress of water, and is rated IP44.
- This mirror may be installed in Zones 1 and 2 and Outside Zones of a bathroom where water jets are not used for cleaning purposes. If installing in a bathroom, a 30mA RCD must be used in accordance with IEE Wiring Regulations and the Building Regulations. An electrician must be consulted if you are in any doubt about your own competency or meaning of bathroom “Zones”, “Equipotential Bonding” or “RCD”.
- If any modification is made it will invalidate the warranty and may render the product unsafe.

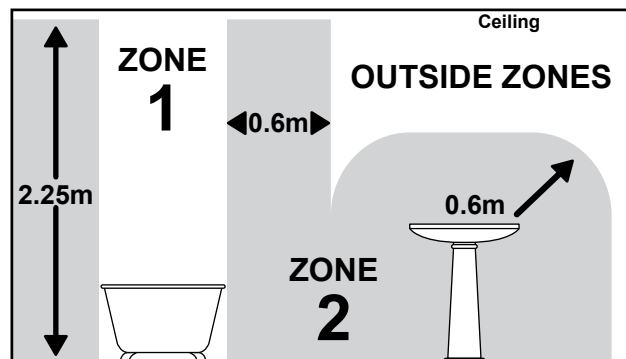

Care Information

- Allow 10 minutes to cool before replacing, adjusting or cleaning.
Clean with a dry cloth only. Do not use liquid or abrasive cleaners on this product.

Assembly/ User Instructions

Before you start

Please read these instructions carefully before fitting and retain for reference. Check the packaging and make sure that you have all the required parts. Follow each assembly step in order to prevent incorrect assembly. Ensure that the product is fully assembled as illustrated before use. This mirror is suitable for use with the remote.

The mirror pack contains:

- Mirror.
- Fixing pack.

The following tools may be required:

- Selection of cross and flat head screwdrivers.
- Electric drill and assorted drill bits.
- Wire strippers.

These assembly diagrams are intended as a guide – if in doubt consult a qualified electrician.

1. Always switch off the electricity supply at the mains during installation and maintenance. We recommend that the fuse is withdrawn or circuit breaker switched off at the distribution board whilst work is in progress.

Refer to Assembly Diagram 1.

2. This mirror fixes to the wall by locating the keyhole shaped slots over the mounting screws in the wall. It is important to get the screw positions correct to ensure easy and secure fitting. Measure the distance between the hole centres on the fixing lugs. Mark the positions of the screw holes on the wall. Check for concealed pipes and wiring before drilling. Use suitable drill bits for masonry and ceramic tiles. Supplied wall plugs are for solid walls only. For all other wall types ensure correct fixings are used. Fit appropriate wall fixings and fit supplied screws. Screw heads must protrude approx 3- 5mm from the wall to enable lugs to fit over adequately. **Refer to Assembly Diagram 2.**

Assembly/ User Instructions Continued

- Undo Junction Box screws and remove lid, ensuring you do not damage the waterproof seal. Pierce a hole in the cable inlet grommet and feed cable through into junction box, allowing adequate flex to manoeuvre the mirror on and off the wall. Connect wires to terminal block, making sure you follow correct wiring orientations and procedures, as shown in **Assembly Diagram 3**.
- Carefully locate fixing slots on frame over screws, ensuring product is fully seated on all mounts. Ensure the correct orientation is used with the junction box situated at the bottom. **Refer to Assembly Diagram 4**.
- Replace fuse or circuit breaker and switch on using the touch on/off switch on the front of the mirror. This product is colour changing and can be either warm white (3000K) or cool white (4000K). Press and hold the switch to choose desired colour. Simply switch on to activate and off to deactivate. **Do not leave the demister running for more than 30 minutes.** The demisting effect will spread approximately 10 - 20% further than the pad itself. The demister pad will warm the mirror surface. **Refer to Assembly Diagram 5 & 6.**

